


PCS Oxidizing Disinfectant Application Wipes

Compatible with oxidizing disinfectants, Sodium hypochlorite, Hypochlorous acid, and Hydrogen peroxide. Diluted solutions of concentrated PCS Sodium hypochlorites solutions have extended shelf life.

Instructions:

- Place workplace label on canister
- Lift lid on container
- Slowly pour 750 mL of ready-to-use oxidizing disinfectant into opening in lid
- Pull the first wipe from the center of the roll and slide into slot
- Read and follow disinfectant label instructions for safe use
- Use test strips regularly
- Extends shelf life of diluted oxidizing disinfectants
- Keep lid shut
- Always identify diluted solution with work place label
- Follow Oxidizing cleaning, Disinfecting and No rinse sanitizing of food contact surfaces label instructions
- Keep out of reach of children and pets
- Rinse surfaces that come into contact with children at mouthing stage of development

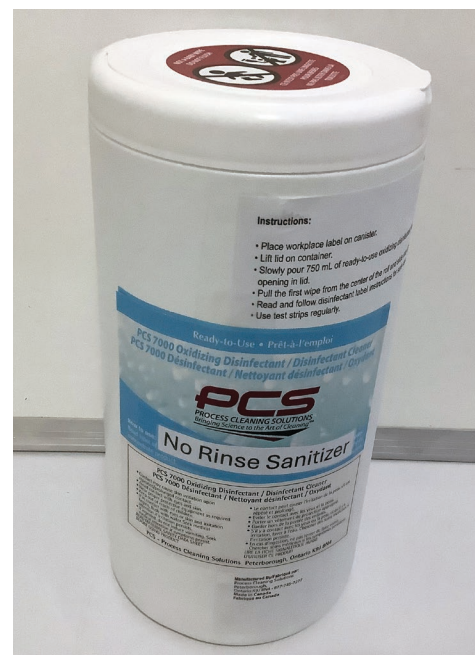

6289-12 PCS Oxidizing Disinfectant Application Wipes
12 containers of 70 wipes 17.8 x 30.5 cm